
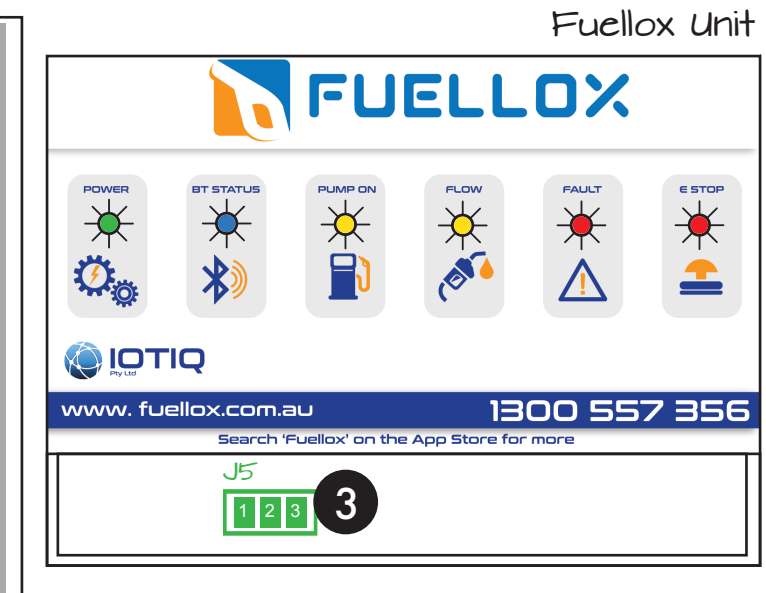


# Macnaught MX Meter + ERA Installation

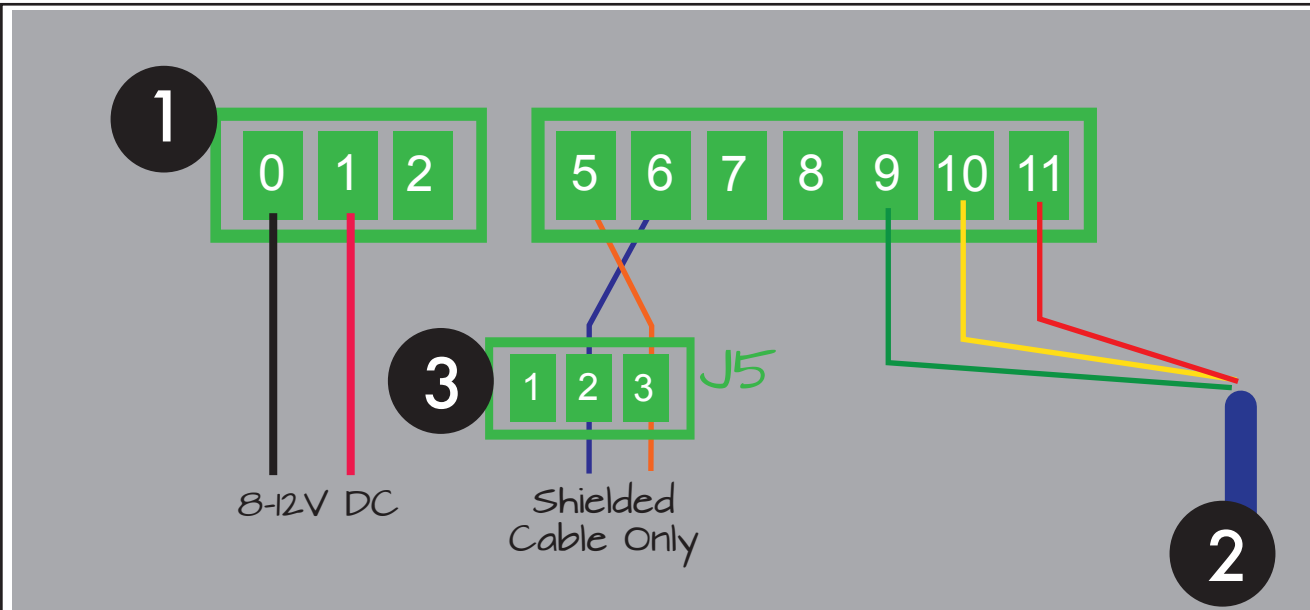

- 1** Macnaught ERA
- 0 - Ground
  - 1 - 12 V DC
  - 5 - To Fuello J5-2
  - 6 - To Fuello J5-3
  - 9 - MX Green
  - 10 - MX Yellow
  - 11 - MX Red +VE

- 3** Fuello Pulse Connector
- 1 = Do not connect
  - 2 = ERA Pin 6
  - 3 = ERA Pin 5

- 2** Macnaught Lead
- Green - Signal
  - Yellow - Signal
  - Red - Power
  - Others - Excluded
  - Must be shielded

- a. - ERA Display must be programmed with the kfactor & other settings
- b. - Jumpers inside ERA may need to be adjusted to run on mains rather than incl battery
- c. - Pulse Width settings as per Fuello Installation manual
- d. - Consult the Machanught ERA guide for additional information

